
Carl's PLACE

Built-In Golf Screen Kit

Assembly Instructions & User Manual

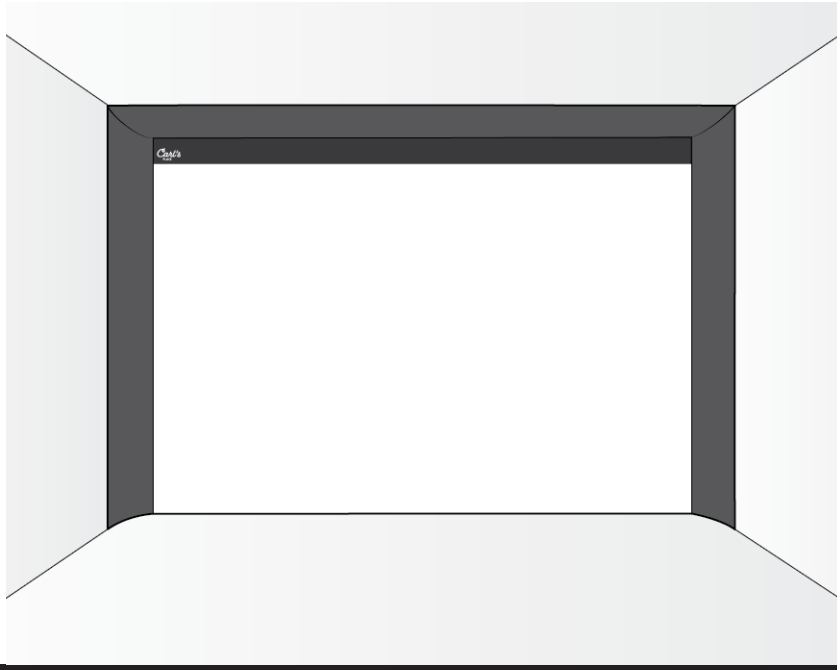


► Watch it installed.

Thank you for using Carl's Place to outfit Your Place! Let us know if you have any questions.
help@carlofet.com | (608) 352-0002

Built-In Screen

Materials List


(4) Corner cable anchors with ¼" lag screws

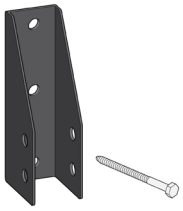


(4) Pulley wheels with safety wire lynch pins




Starter Panels

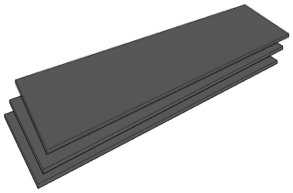


Fastener set with
(100) Long screws and drywall anchors
(50) Short screws, *not used in screen-only setups*

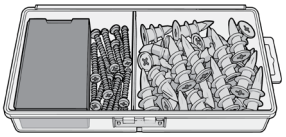

(10) Snaphooks with (20) screws and drywall anchors

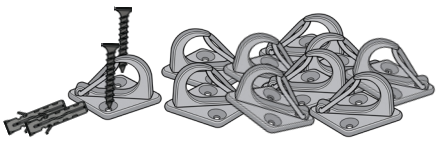

(1) Impact screen with pre-fed bottom cable and loose top cable

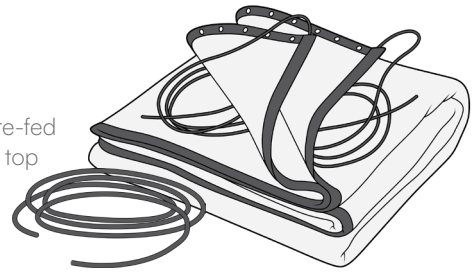


(10) Zip ties




(50) Straps



(2) Cable locks (with release pin)

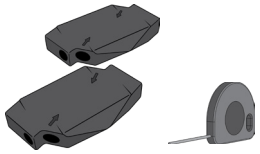

(3) Detached flaps

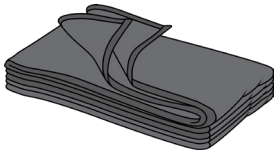

Optional Accessories

Foam Inserts

What's Needed

~4 hours

Drill and Driver plus bits

10mm Socket wrench

Step Ladder


Tape measure

Recommended. A friend who owes you a favor


Levels (laser level and/or plumb line)

Assembly Overview


1. Plan, Measure, Align

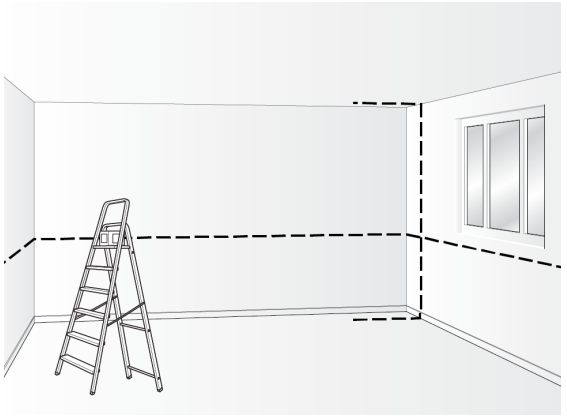

2. Install Hardware

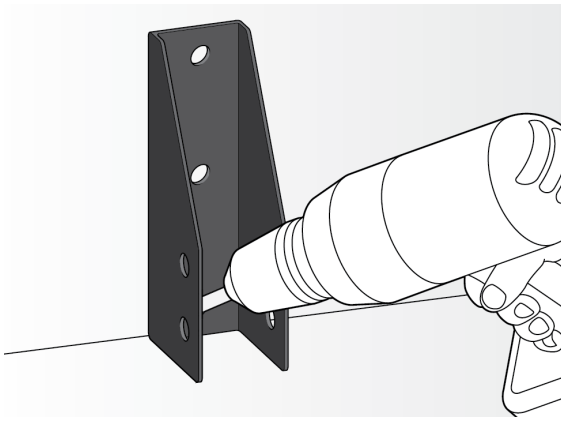

3. Hang Impact Screen

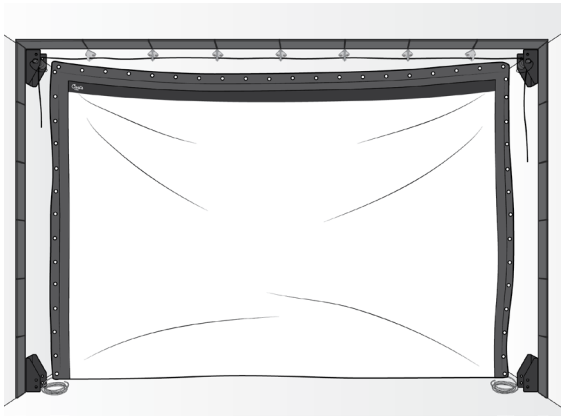


4. Secure Flaps




Plan, Measure, and Align Your Space

These instructions assume straight, even 2x4 wood-framed walls. Other wall construction may require different hardware or installation methods.

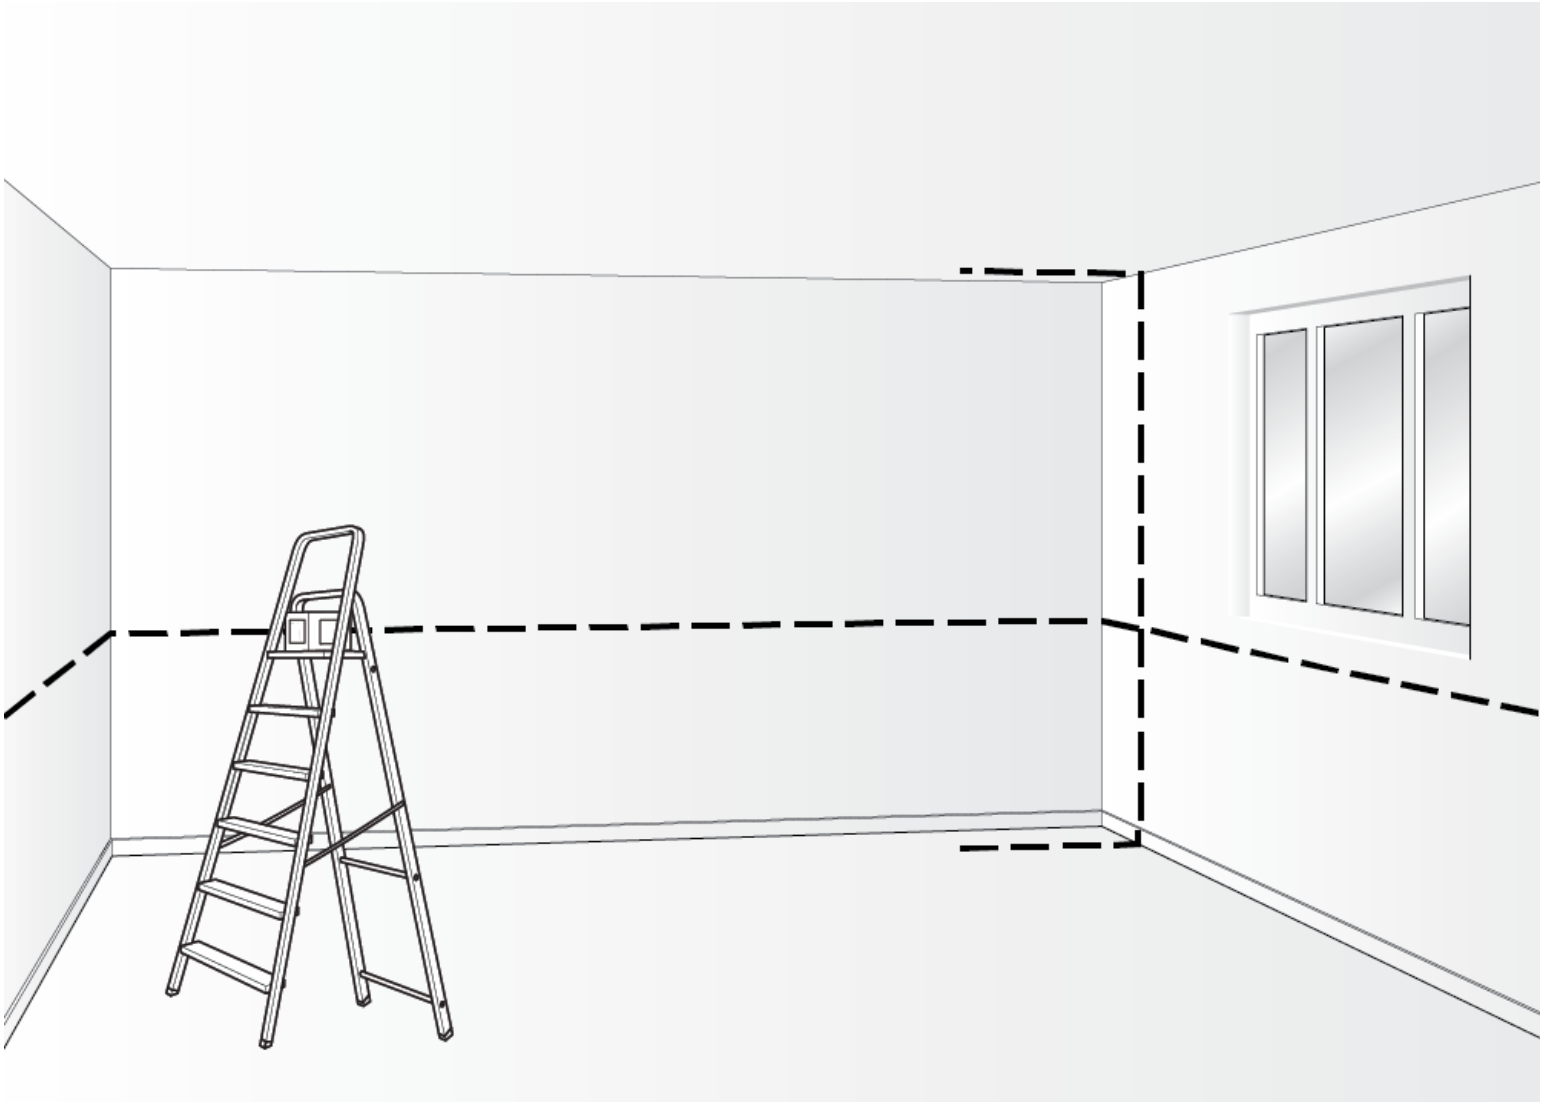

Plan to place the screen at least 1 ft from the back wall to allow for fast-flying golf balls. Use a laser level to align all components on an even plane.

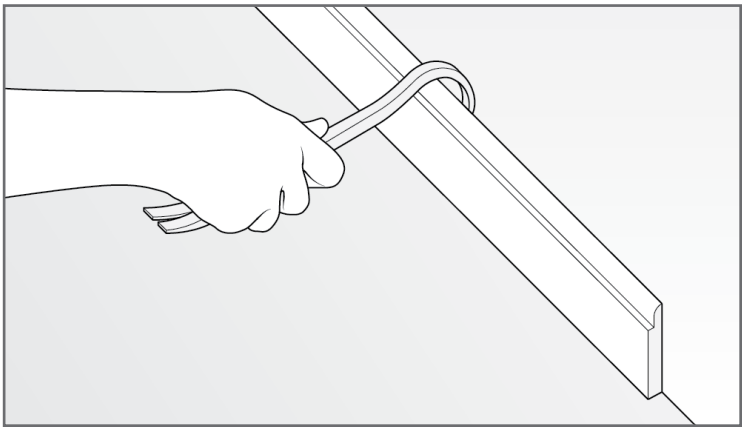


Carl's Tips

Remove (or adjust for) trim and other obstructions that could interfere with the installation.

Install Hardware

Install Corner Cable Anchors


Measure at least 1 ft from each corner of the back wall. Mark the placement of the 4 corner cable anchors. Two on the floor. Two on the ceiling.

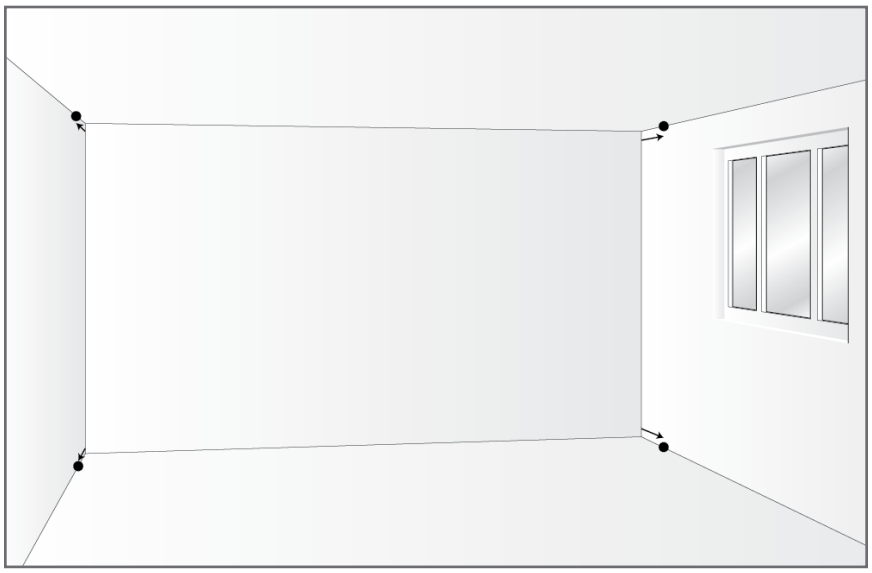

Place one corner cable anchor on the floor with the tapered end pointing up.

Make sure the anchor is level. Mark the bottom angled hole and drill a pilot hole at a downward angle into the bottom plate of the wall

Secure the anchor through the angled hole using one ¼" lag screw.

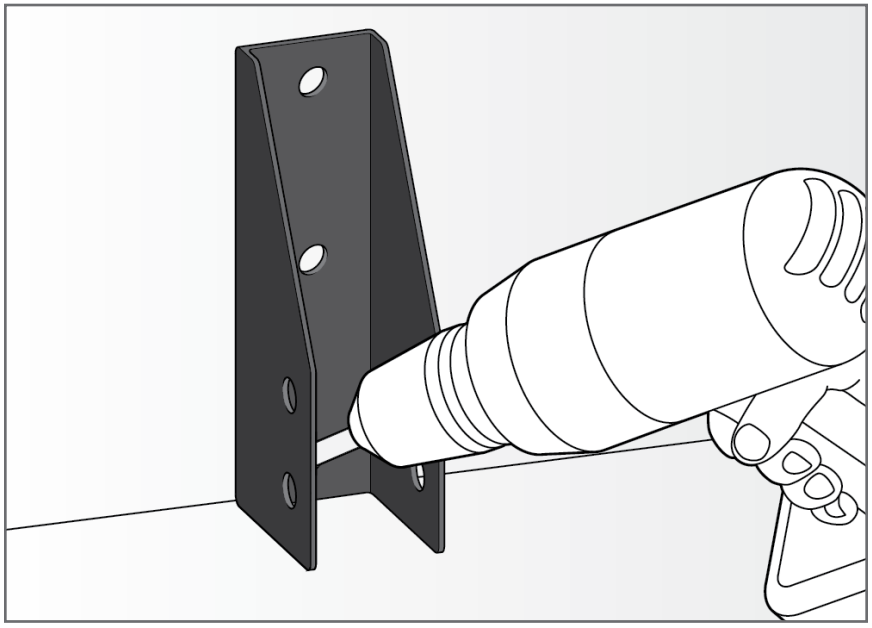


Carl's Tips

The corner cable anchor is designed to secure the screen with a single screw through the angled hole (as shown). The two upper holes may be used for additional support, but they are optional.

Repeat for the remaining anchors, keeping all four aligned.

Note: Install the two ceiling anchors with the tapered ends pointing down.

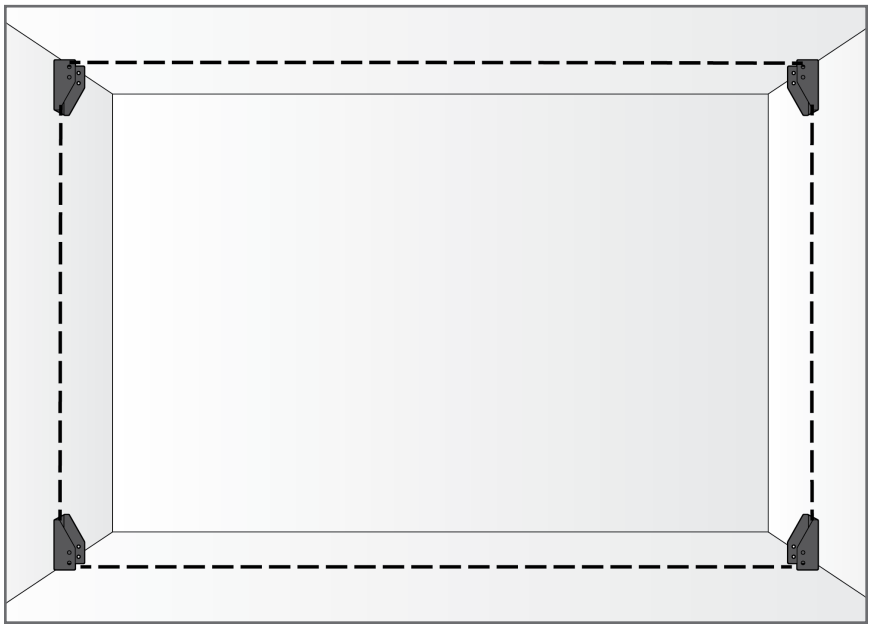


Install Starter Panels

Use your diagram to see which size starter panel goes where.


Starter panels get installed in a straight, even line just in front of the corner cable anchors.

Use a laser level or plumb line for accuracy.

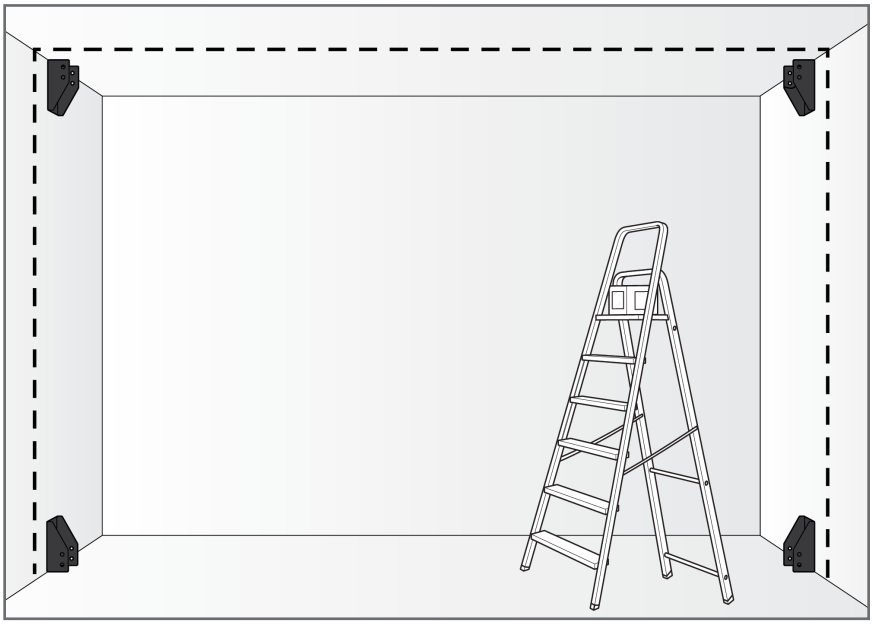

Start at the bottom, setting the lowest starter panel against the floor. Make sure it is level and aligned with the cable anchor, then screw it into a stud (or use drywall anchors).


Continue up the walls and across the ceiling, maintaining a straight even line of starter panels.

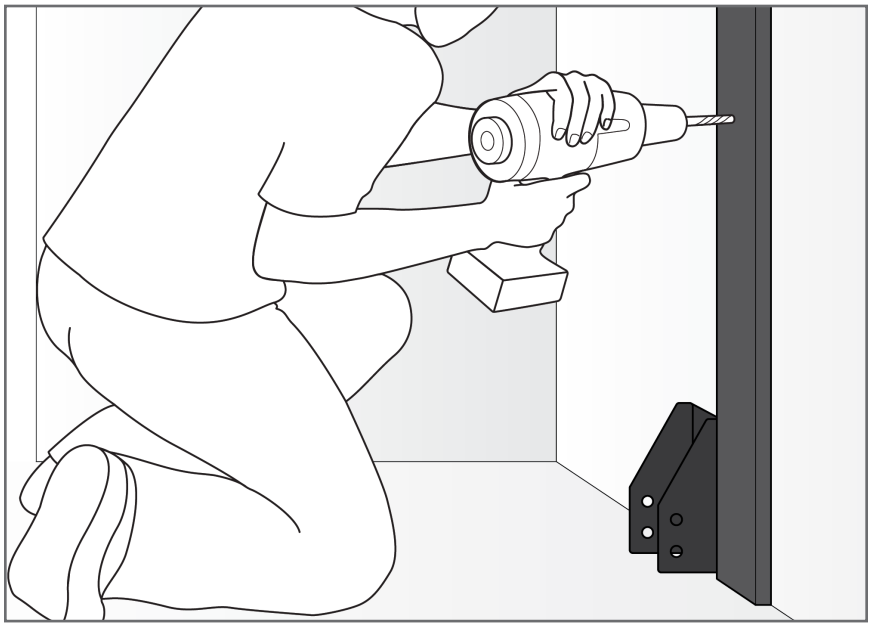

Install Ceiling Snaphooks

Evenly space out all snaphooks behind the ceiling starter panels and orient them with the clip opening toward the rear of the room.

Once aligned, drill each snaphook securely into a ceiling stud (or use the drywall anchors with $^{13}/_{64}$" bit).

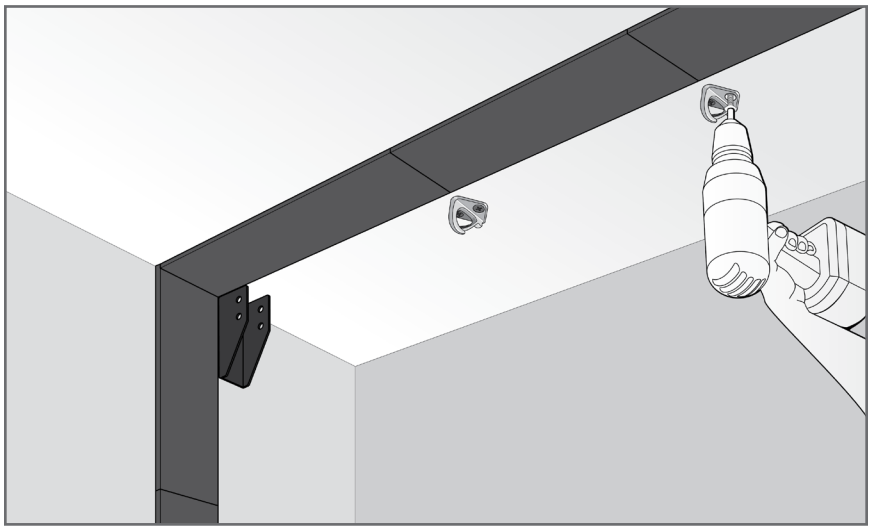


Carl's Tips

Since snaphook placement is flexible, you can use the starter panel seams as a general spacing guide.

Install Top Cable


The screen uses a top and bottom cable. The bottom cable is already fed through the bottom of the impact screen. The top cable comes separate, and gets installed first.

Press the top cable into one ceiling corner cable anchor. Insert the pulley wheel, then secure it with a safety wire lynch pin through the lower hole.

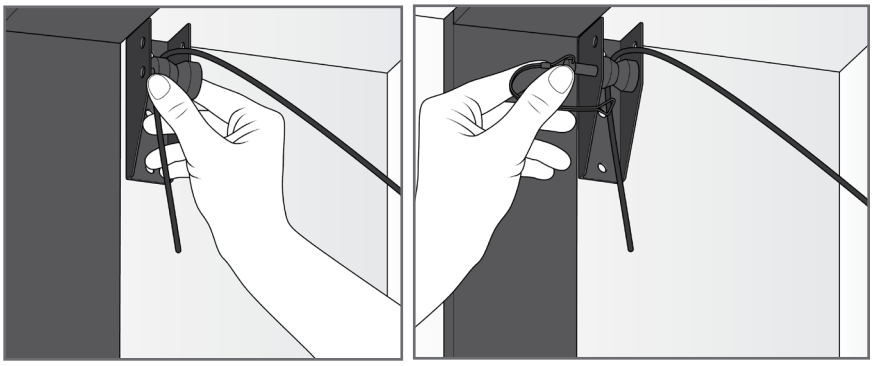


Repeat at the opposite ceiling cable anchor.

The top cable should now span the ceiling, with an even amount hanging down on both sides.

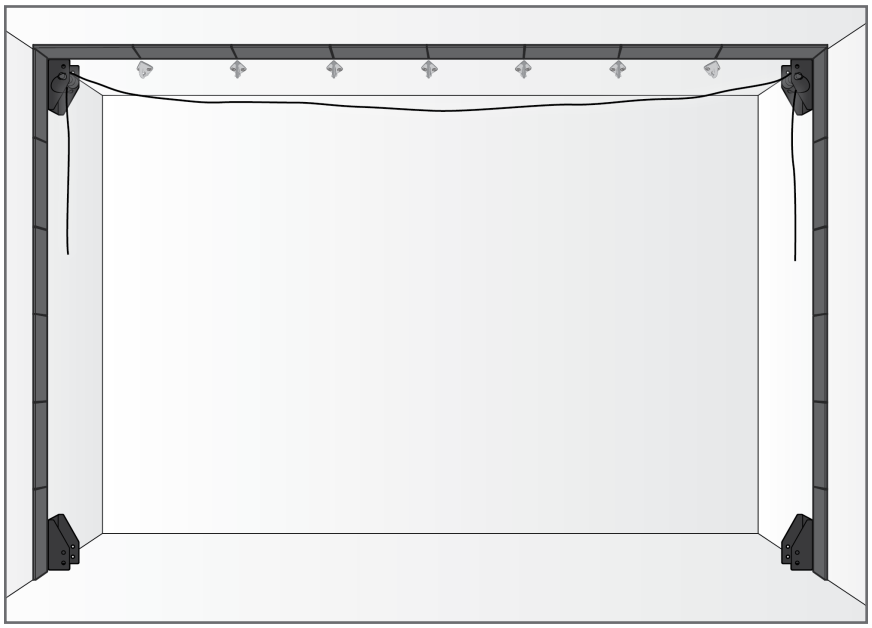


Secure the top cable into the ceiling snaphooks.

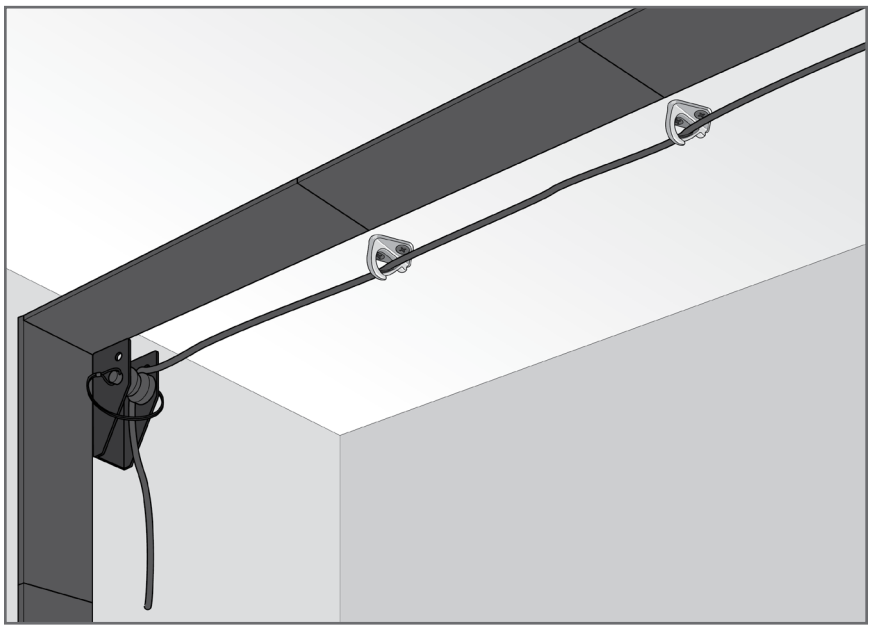


Hang Impact Screen

Orient the impact screen with the Carl's Place logo in the top left.

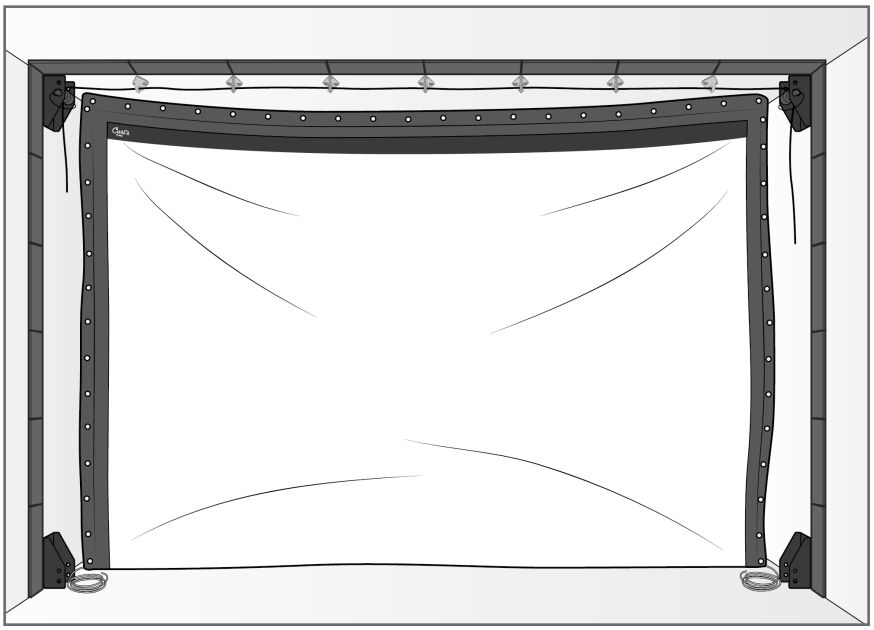


Loosely zip tie the top 2 corners of the screen around the pulley wheel of the 2 ceiling corner cable anchors.

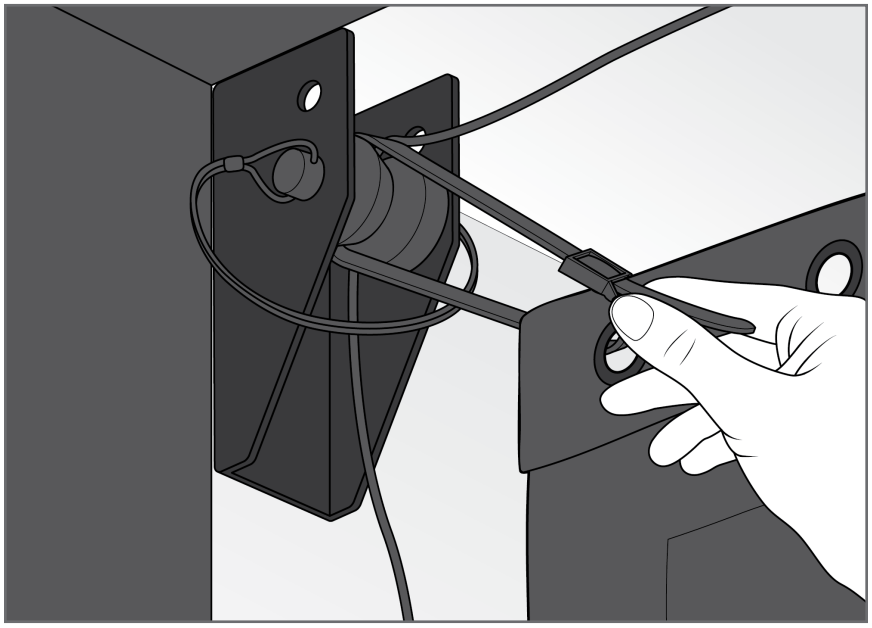

Carl's Tips

Bend the tip of the zip-tie to get it to curve around behind the pulley wheel.

Your screen should now hang loosely from the ceiling with the bottom cable lying on the floor.

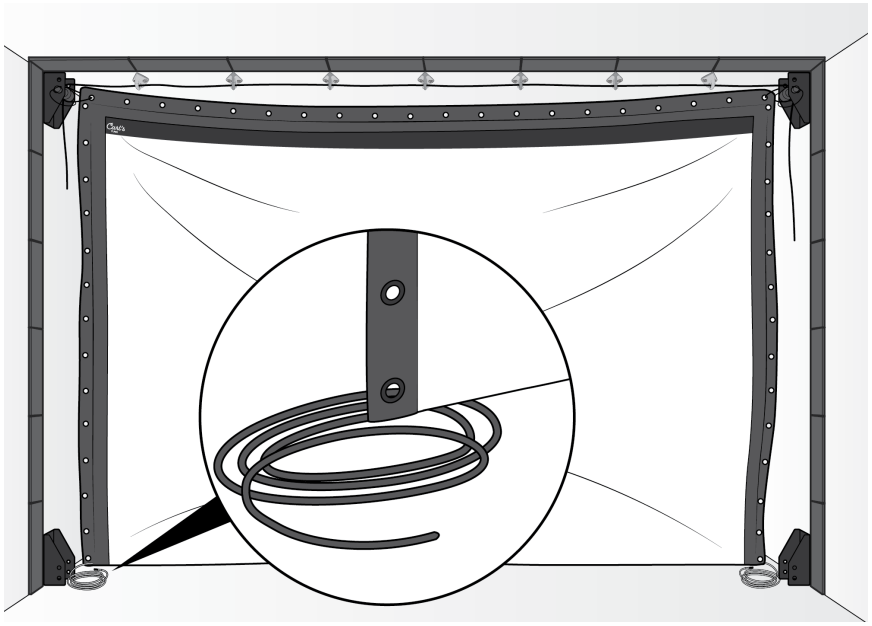


Carl's Tips


Don't worry too much about any wrinkles, those will relax with tension over time.

Take one end of the pre-fed cable that runs through the bottom of the screen and press it into a floor corner cable anchor.

Insert the pulley wheel, then secure it in place with the lynch pin through the lower hole closest to the floor.

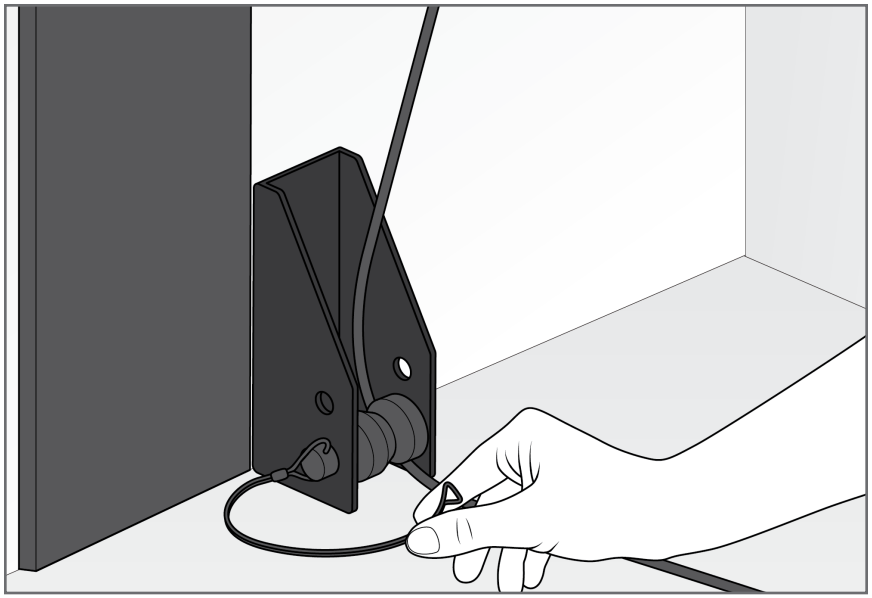


To connect the top and bottom cables on each side, feed each end into the angled holes of a cable lock.

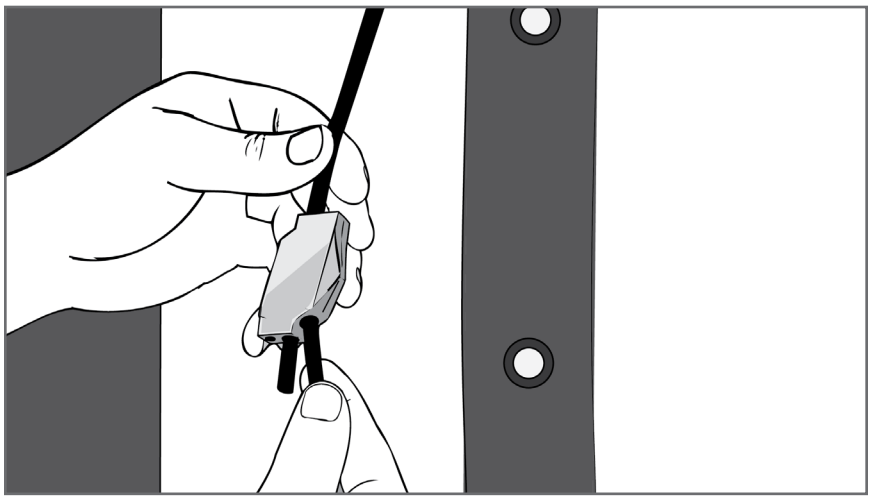


Repeat on the other side of the screen, then pull all the cables taut to secure it.


Use the release pin if you need to loosen or uninstall the cable.

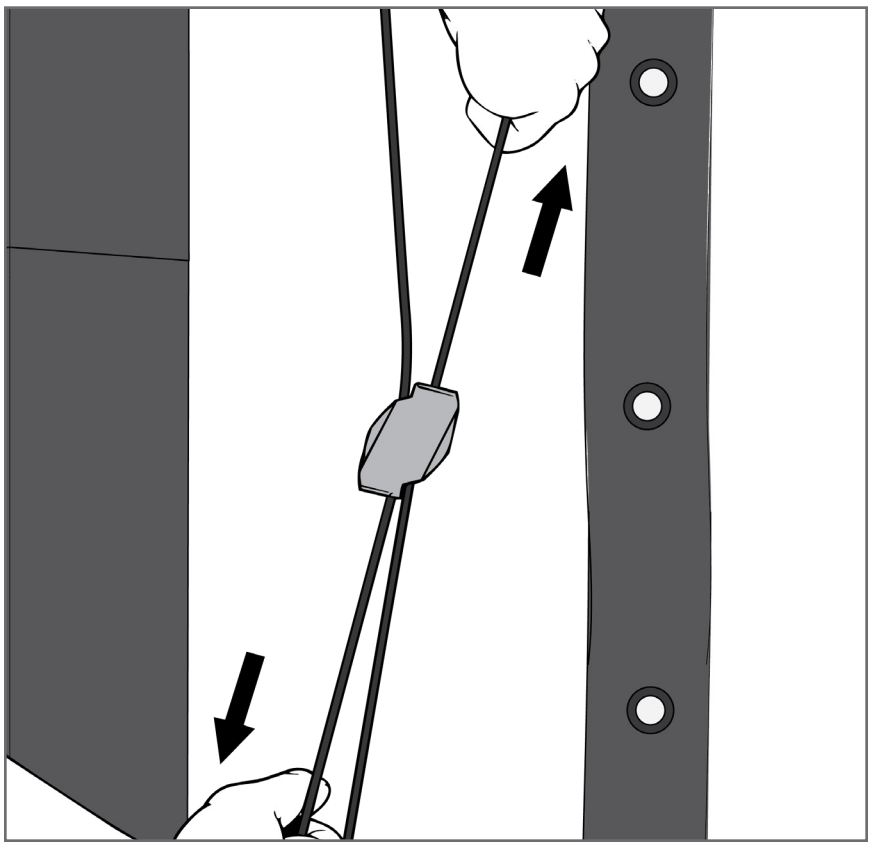

Add a zip tie through each bottom corner grommet and around the corner anchor pulley wheel.

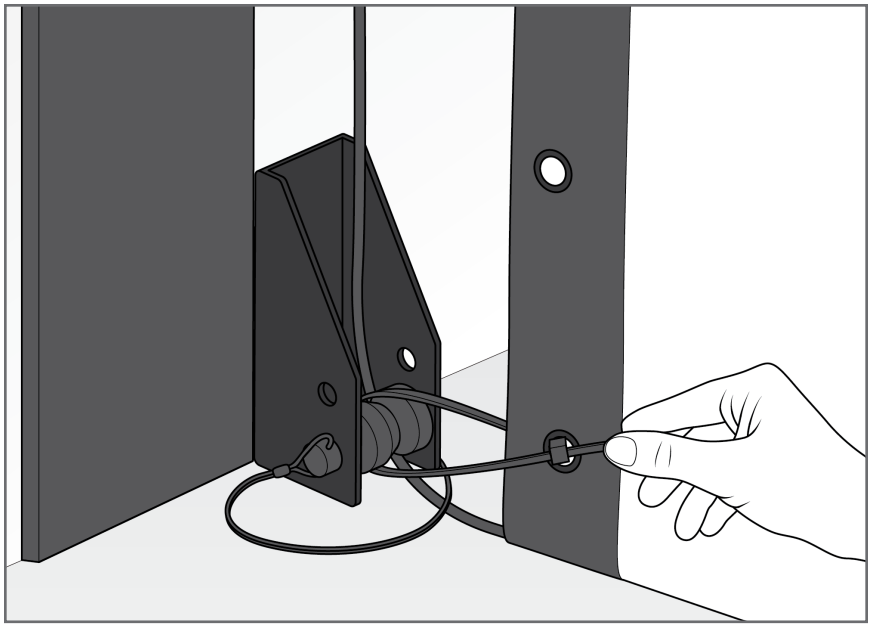


Tighten all four corner zip ties until taut, maintaining an even gap on each side of the screen.

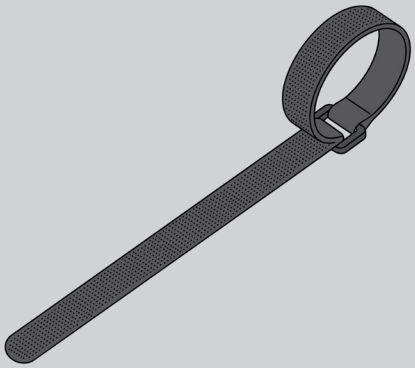

Switch to using hook and loop straps.

To use the straps, feed the end of the strap through a grommet and around the cable, keep the soft loop side facing out. Insert the tail end into the buckle, then fold it back onto the hook fasteners to secure.

Starting along top of the screen, use straps through each grommet and around the cable. Tighten each strap only enough to maintain an even gap between the edge of the screen and the ceiling.

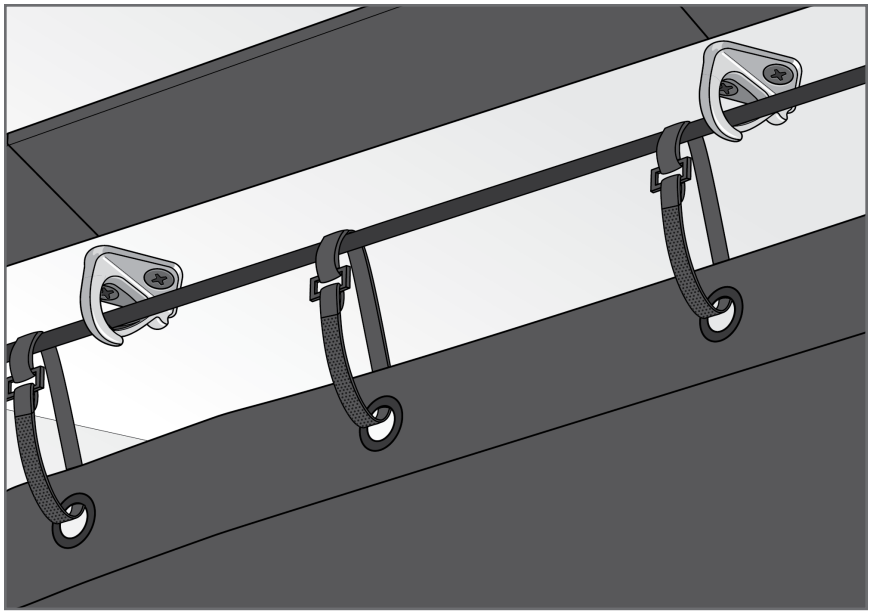


Continue down both sides until every grommet is connected to the cable. (Except the corners which already have zip ties.)

Carl's Tips

Keep the screen centered throughout the hanging process, it's easier to just keep it centered as you go vs. trying to shift it later.


Make Any Necessary Screen Adjustments

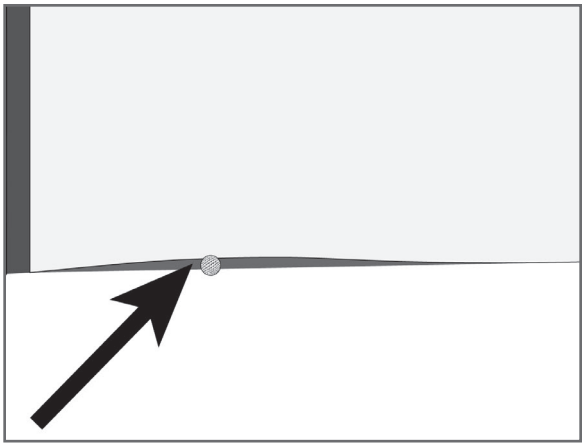

Check the screen tension and spacing.

- Is the bottom of the screen level with the floor? Adjust straps to obtain minimal gap on the floor.
- Is the cable loose? Ensure the cable is taut by pulling on the cable locks.
- Is the screen lacking tension? Adjust straps to achieve the right balance of tension by making sure they maintain and even gap along the screen edges.

Congrats! Your built-in screen is up!

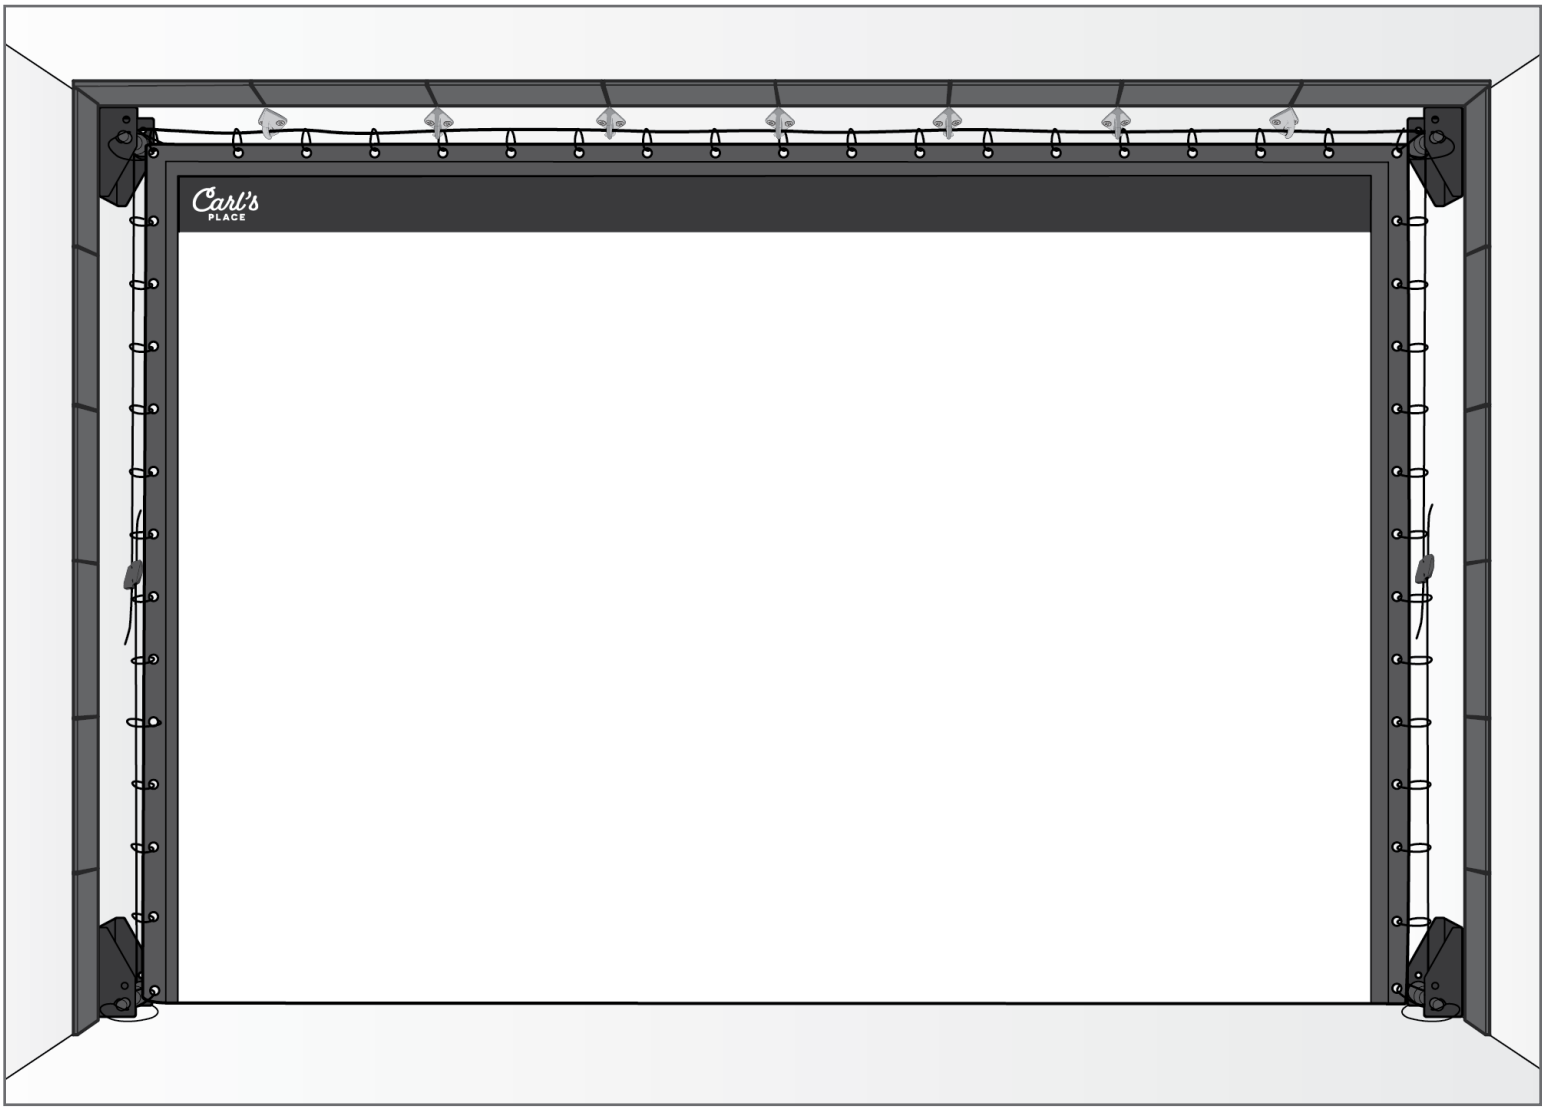


Carl's Tips

Order pizza. It should arrive right as you finish up the screen install.


Secure Flaps

Time to attach the flaps that will cover the exposed cable. First, identify each flap. Flap length varies by room size.

Width (1 flap) - Spans the width of your screen; has intersecting hook-and-loop strips on one side

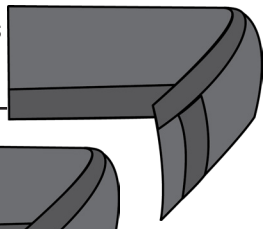

Height (2 flaps) - Spans the height of your screen; has a long hook fastener strip on each side

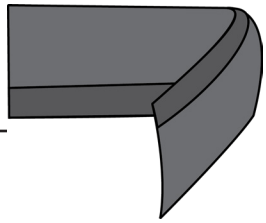


Insert Foam (if ordered)

As you install the width and height flaps next, push foam inserts behind them with the narrow edge facing the rear. Trim any excess with a cutting tool.



Attach Width Flaps to Screen


1. On the width flap, attach the side where the hook-and-loop strips intersect to the top corner of the screen *(flap will hang down over the screen)*. Continue attaching along the top edge.
2. Then lift the flap up and secure to the ceiling starter panels using the hook-and-loop strips.

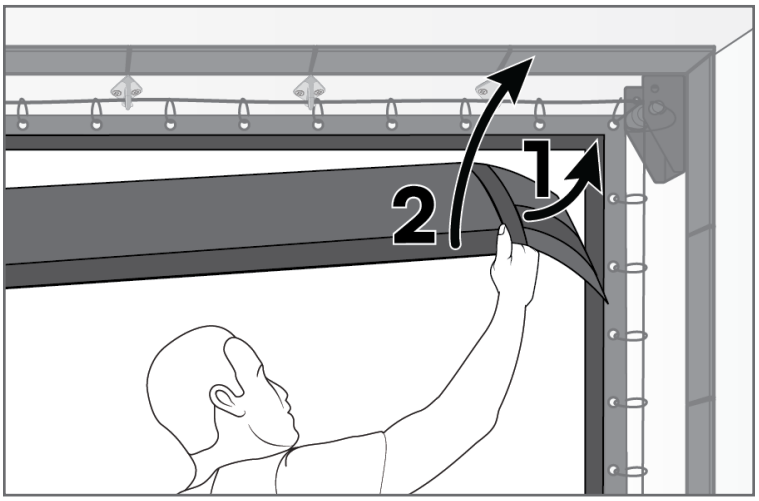


Attach Height Flaps to Screen

1. Starting at the top, align the height flap to the top of the width flap.
2. Then fold the flap over and secure to the wall starter panels using the hook-and-loop strips.

Tuck any excess flap material in at the bottom.

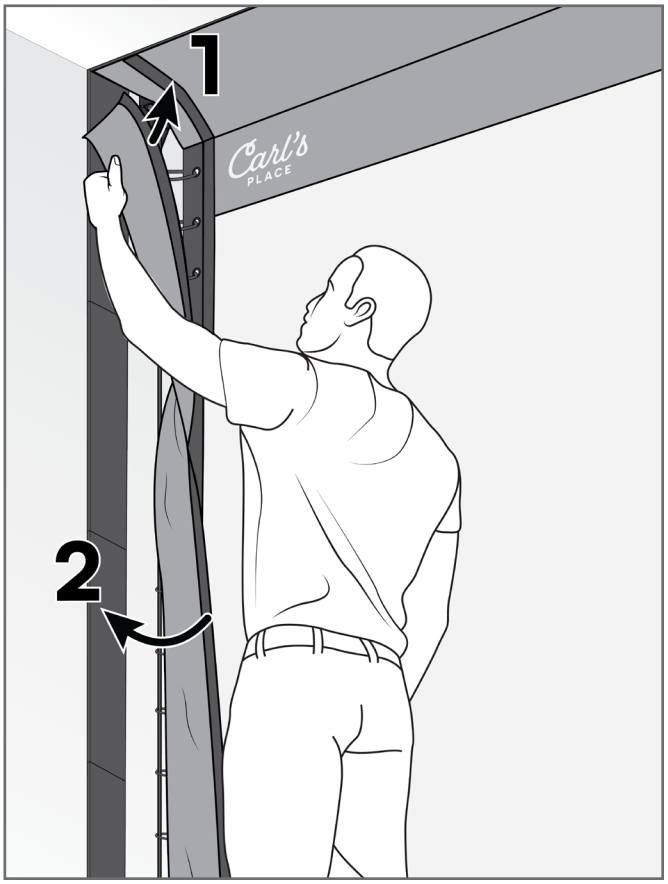

Nip, tuck, and smooth out any lines. Any creases remaining from folding will relax over time. **You're ready to golf!**

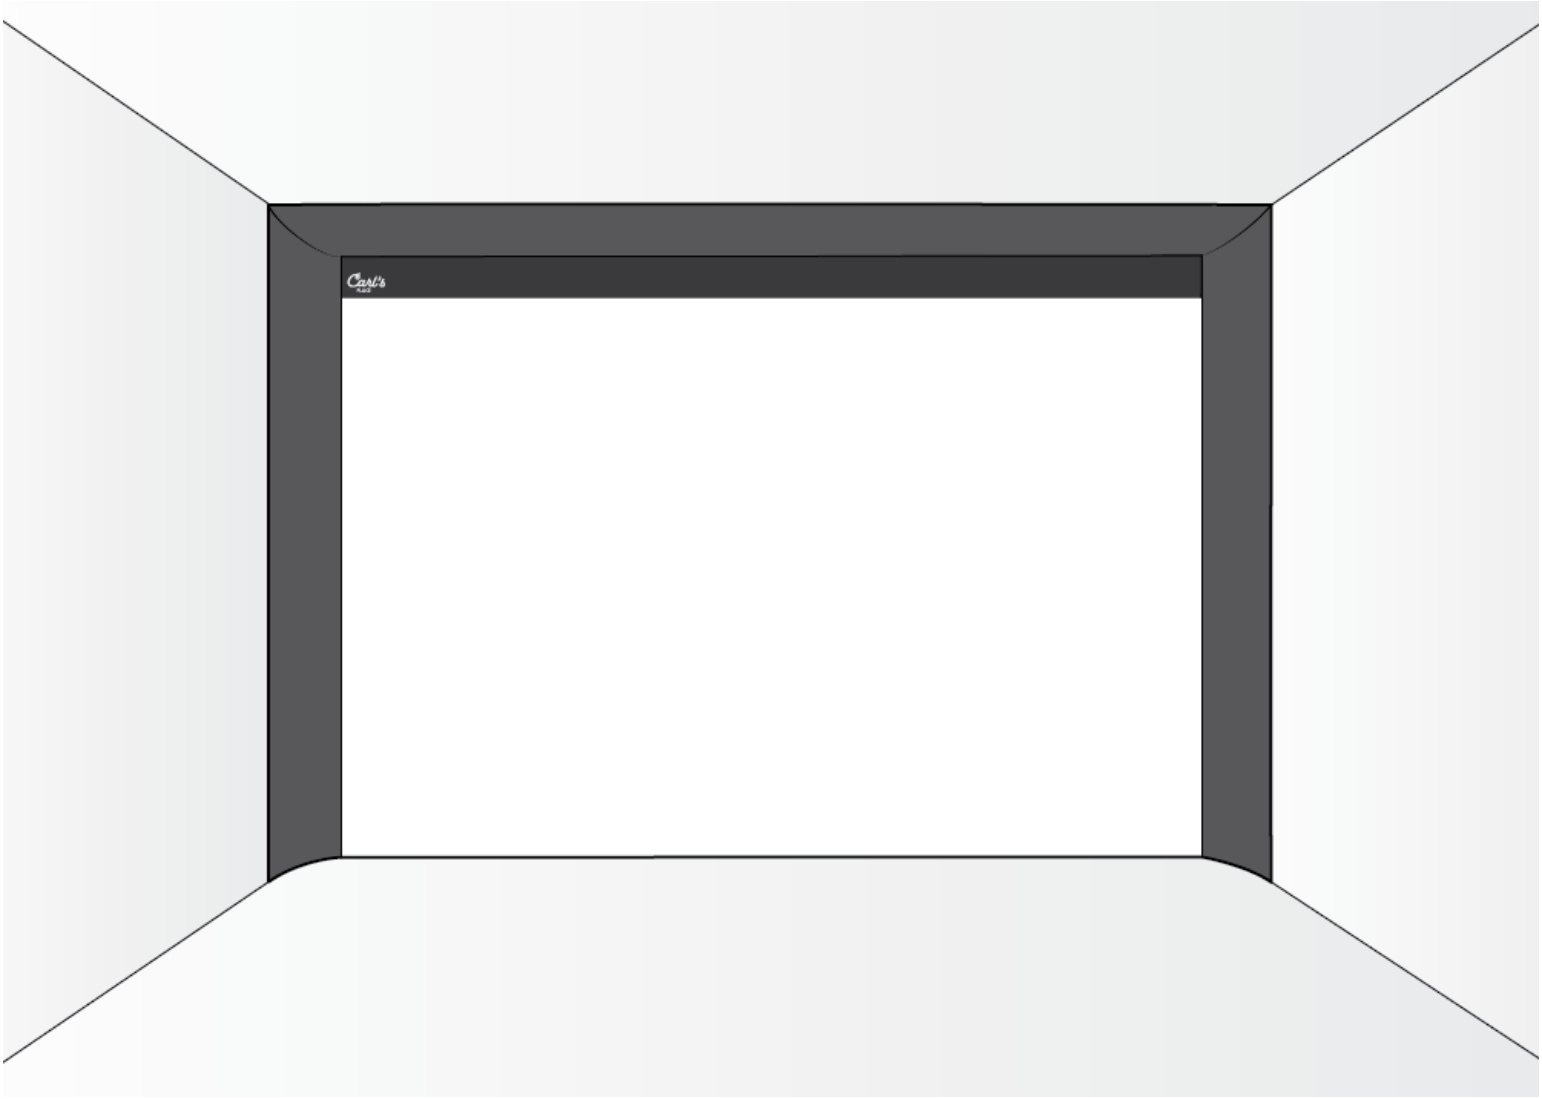

Send Carl a Picture!

We want to see your golf setup! Scan the QR code or go to www.carlofet.com/share-with-us. Send us pics. Videos. Rave reviews. Or even recommendations.

More of a social creature?
Tag us and throw a quick #mycarlsplace on your post.
We just may feature your golf simulator in our next campaign.

Anything else we can help you with?


help@carlofet.com


(608) 352-0002, Monday-Friday, 8am-4pm CT

Customers who do not follow the assembly, instructions and tips in this manual increase their risk of injury. Take proper safety precautions to protect ceilings, walls, windows, cars and neighboring homes. Keep children, pets and spectators out of swing range. **By using any Carl's Place product(s), you agree to the Terms and Conditions, as well as the Privacy Policy and any policies referenced on www.carlofet.com.**

Thank you for your business!

Carl's Place LLC, 1650 Putman Pkwy, Milton, WI 53563
Questions? Comments? We welcome your feedback!
www.carlofet.com | help@carlofet.com | (608) 352-0002