

Carl'sPlace

6.75x9 Projector Screen Frame Kit


Tubing Cut List and Assembly Instructions

Thank you for purchasing a projector screen frame kit from Carl's Place! Included in this document you will find all the information you should need to assemble your new 6.75x9 Projector Screen. **Before proceeding, please read the following tips to help make the project go as smoothly as possible:**

- This kit requires twelve 10' long 1" EMT tubes (electrical conduit). These can be found at any building supply store and most hardware stores and lumber yards. Just ask for 1" EMT and an employee there can direct you to the materials.
- When cutting the tubes to length, there are several tools that can be used. A hacksaw with a metal-cutting blade works well but is not the fastest. A band saw, jig saw, or reciprocating saw with a metal cutting blade will make things go a little faster, and a dedicated pipe cutter will make the cleanest cuts. **Please be careful with cut edges of EMT, as they can be very sharp.**
- The included fittings work by inserting a piece of EMT into them and tightening down the eye-bolts. After getting them finger tight, a wrench or screwdriver can be used to further tighten the joint. The eye-bolt will actually create a dent in the tube and hold it precisely in place.
- The measurements shown on the tube cutting list assume that the tubes will be inserted 4" into the fittings. It is highly recommended that you mark each end of each tube at 4" as a reference to use while assembling the frame.
- Finally, **do not leave your screen out in the wind unless it is sufficiently anchored to the ground!** A projector screen can catch a large amount of wind and as such can easily produce a lot of damage if not anchored well.



Tubing Cut List

The image below shows how to cut the required lengths out of 12 tubes

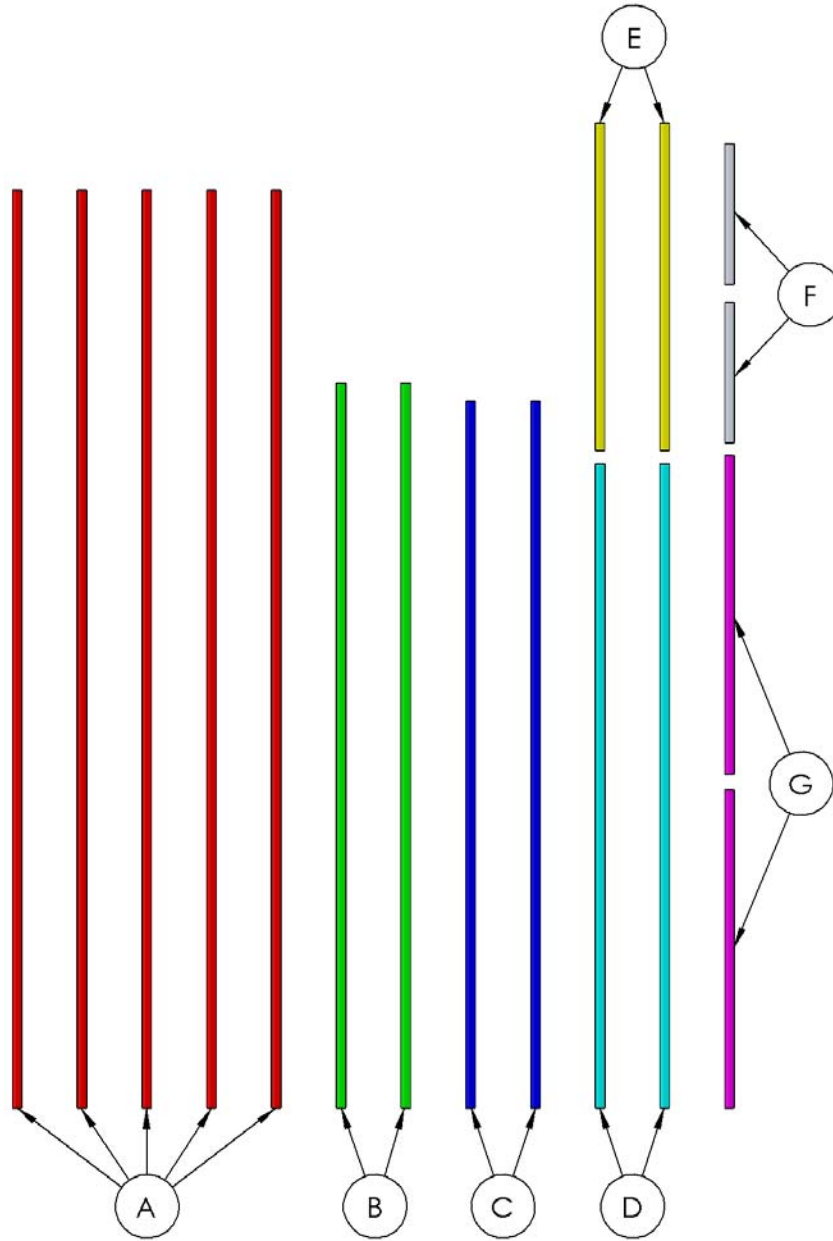


Tube Letter	Quantity	Length
A	2	113 3/8"
B	2	89 1/2"
C	2	87 1/4"
D	4	79 5/8"
E	5	40 3/8"
F	2	17 3/8"
G	2	39 3/8"

Completed Assembly Reference

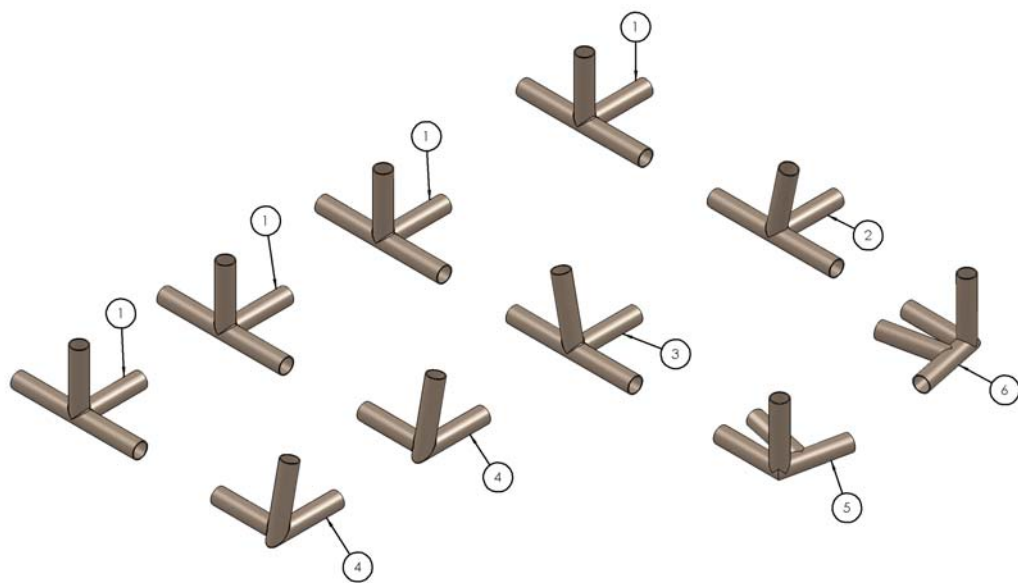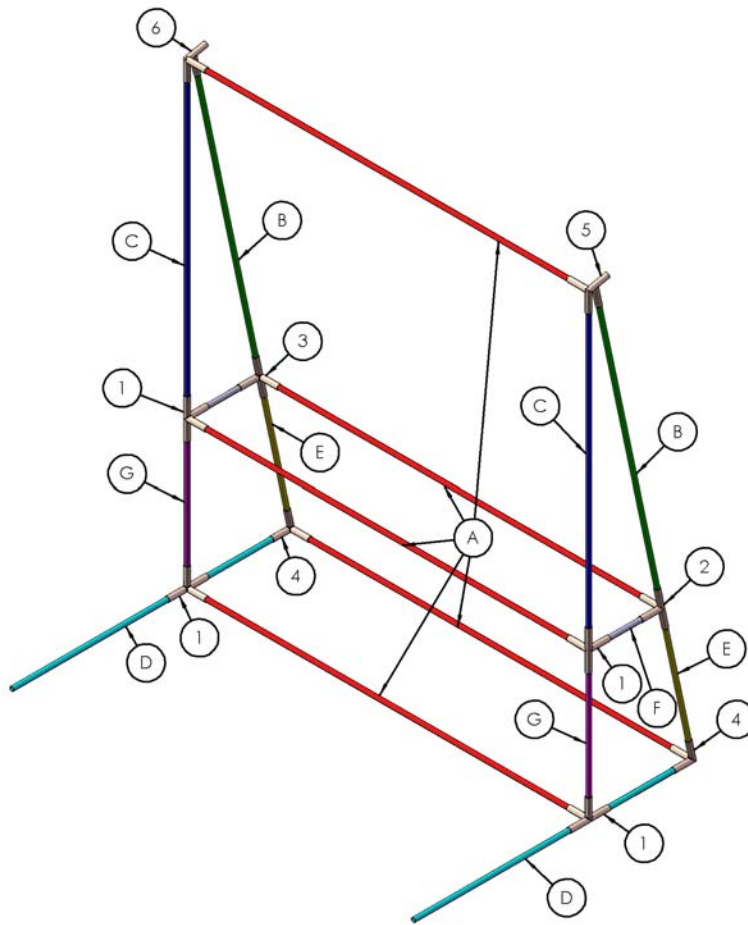


Assembly Steps


1: The frame should be assembled while lying on its back on the ground. Start by assembling the two rectangles as shown. Use the tubing cut list and the completed assembly reference as a guide for which tubes and fittings to use. Use fittings #2, #3, #4, #5, and #6 with tubes A, B, and E:

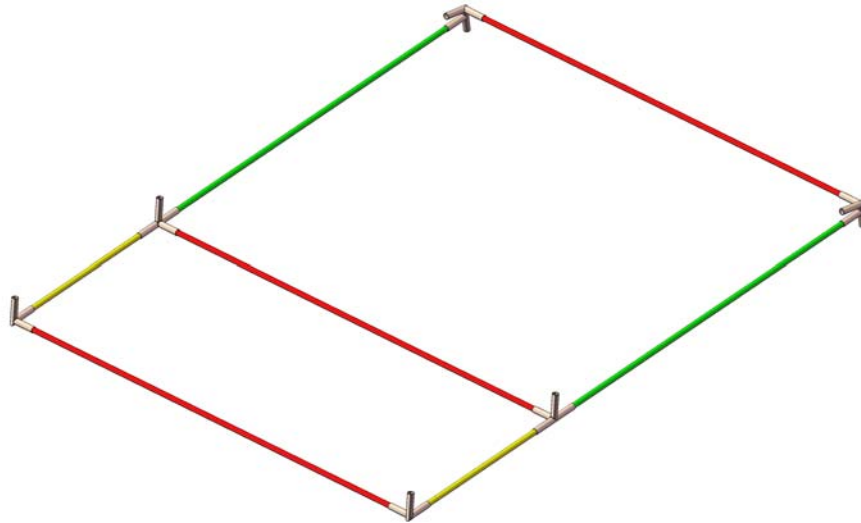


2: Build the screen square using two #1 fittings and tubes A, C, and F:

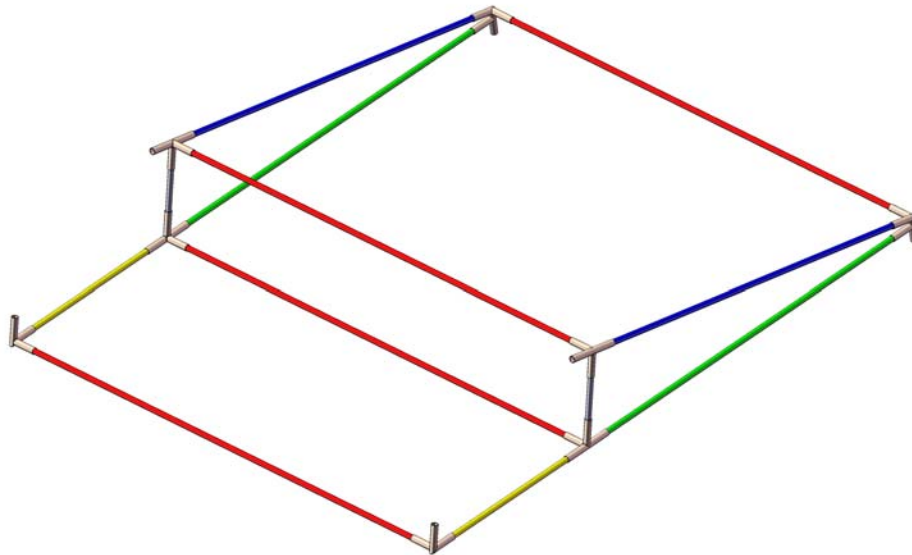


3: Construct the lower rectangle using two #1 fittings and tubes A and G:

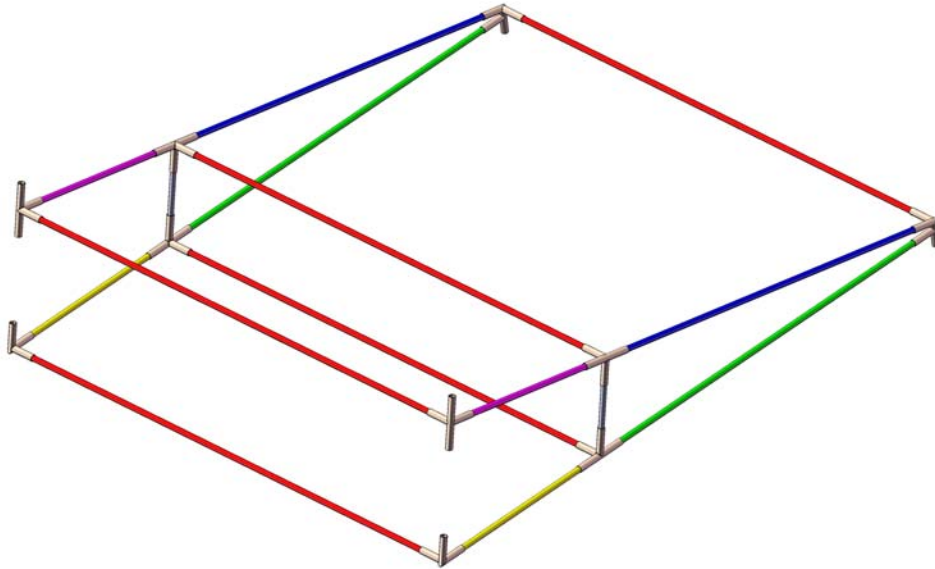

4: Slide the feet (tubes D) through the two fittings installed in step 3 and into the corner fittings, making sure to keep the fittings spaced as shown below:

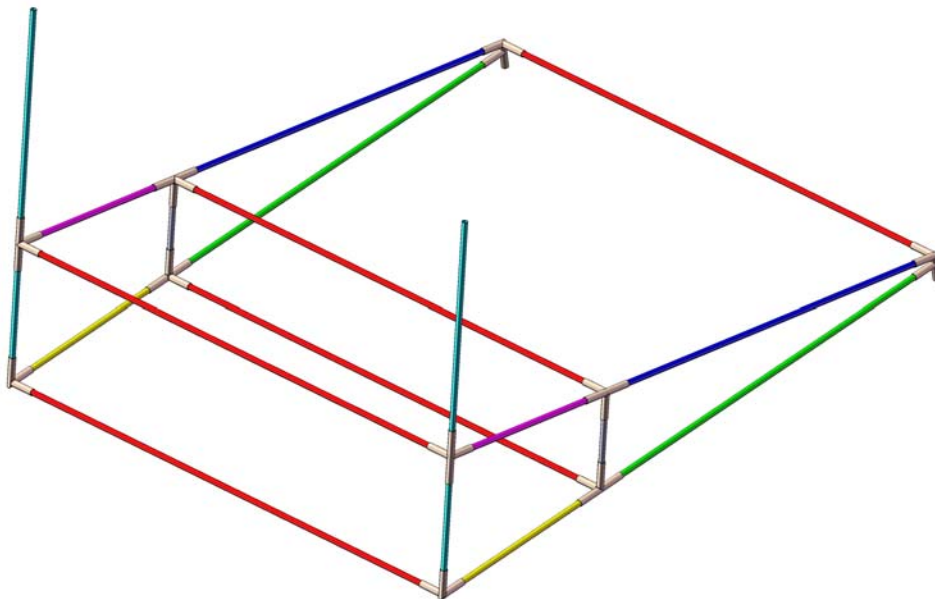

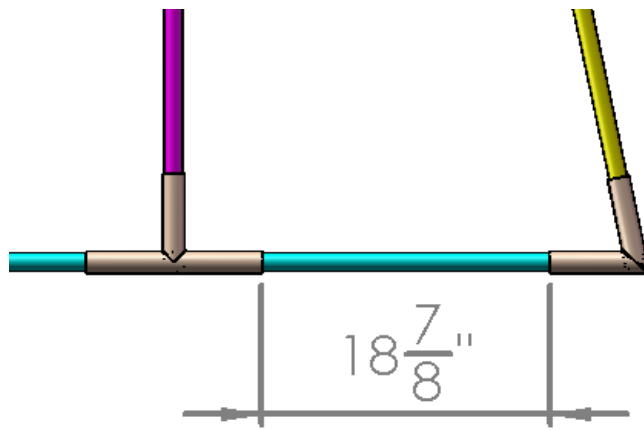

5: Stretch the screen across the frame using bungees, rope, or whatever other method you wish. Tip the frame up onto its feet and your screen is ready to use! If you plan to leave the screen in place where it will be exposed to wind, please remember to anchor it down to the ground, a building, or any heavy object to avoid any damage.